



Using Your Office Phone Guide (T57W)

Powered by



Using Your Office Phone Guide (T57W)

Table of Contents

<u>Section 1: Basic Call Management</u>	<u>3</u>
<u>Place a Call</u>	<u>4</u>
<u>Answering a Call</u>	<u>5</u>
<u>End Call</u>	<u>6</u>
<u>Redial</u>	<u>6</u>
<u>Call Mute/Unmute</u>	<u>7</u>
<u>Call Hold and Resume</u>	<u>7</u>
<u>Volume Adjustment</u>	<u>7</u>
<u>Setting Ringtones</u>	<u>8</u>
<u>Section 2: Transfer and Forward</u>	<u>9</u>
<u>Call Transfer</u>	<u>10</u>
<u>Call Forward</u>	<u>11</u>
<u>Section 3: Conference Call</u>	<u>12</u>
<u>Call Conference</u>	<u>13</u>
<u>Speed Dial</u>	<u>13</u>
<u>Section 4: Setting Up and Managing Your Voice Mail</u>	<u>14</u>
<u>Setting Up Your Voicemail</u>	<u>15</u>
<u>Creating Your PIN</u>	<u>15</u>
<u>Recording Your Name Announcement</u>	<u>15</u>
<u>Updating Your Voicemail</u>	<u>16</u>
<u>Changing Your PIN</u>	<u>16</u>
<u>Re-Recording Your Name Announcement</u>	<u>17</u>
<u>Changing Your Voicemail Greeting</u>	<u>17</u>
<u>Access Voice Message</u>	<u>18</u>
<u>Section 5: Managing Call History and Contacts</u>	<u>19</u>
<u>Call History</u>	<u>20</u>
<u>Contact Directory</u>	<u>21</u>

Powered by



Powered by



Using Your Office Phone Guide (T57W)

Place a Call

Using the handset:

1. Pick up the handset.
2. Enter the number and press **Send**.

Using the speakerphone:

1. With the handset on-hook, press 
2. Enter the number and press **Send**.

Using the headset:

1. With the headset connected, press  to activate the headset mode.
2. Enter the number and press **Send**.

During a call, you can alternate between the headset, hands-free speakerphone and handset modes by pressing the **HEADSET** key, the **Speakerphone** key or by picking up the handset. Headset mode requires a connected headset.

Powered by



Using Your Office Phone Guide (T57W)

Answering a Call

Using the handset:

- Pick up the handset.

Using the speakerphone:

- Press  .

Using the headset:

- Press .

You can reject an incoming call by pressing the **Reject**.

Powered by



Using Your Office Phone Guide (T57W)

End Call

Using the handset:

- Hang up the handset or press **EndCall**.

Using the speakerphone:

- Press  or **EndCall**.

Using the headset:

- Press **EndCall**.
-

Redial

- Press  to enter the **Placed Calls** list, select the desired entry and press the desired entry.
 - Press  when the phone is idle to dial out the last dialed number.
-

Powered by



Using Your Office Phone Guide (T57W)

Call Mute/Unmute

- Press  to mute the microphone during a call.
 - Press  again to unmute the call.
-

Call Hold and Resume

To place a call on hold:

- Press **Hold** during an active call.

To resume the call, do one of the following:

- If there is only one call on hold, press  or **Resume**.
 - If there is more than one call on hold, select the desired call and press  or **Resume**.
-

Volume Adjustment

- Press  to adjust the volume.

Powered by



Using Your Office Phone Guide (T57W)

Setting Ringtones

1. Go to **Menu > Settings > Basic Settings > Sound > Ring Tones**.
 2. Select **Common** or the desired account and then press **Enter**.
 3. Select the desired ring tone.
 4. Tap **Save** to accept the change.
-

Powered by



Using Your Office Phone Guide (T57W)



Section 2: Transfer and Forward

Powered by



Using Your Office Phone Guide (T57W)

Call Transfer

You can transfer a call in the following ways:

Blind Transfer

1. Press  or **Transfer** during an active call. The call is placed on hold.
2. Enter the number you want to transfer to.
3. Press  or **B Trans.**

Semi-Attended Transfer

1. Press  or **Transfer** during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press **Send**.
3. Press  **Transfer** when you hear the ring-back tone.

Attended Transfer

1. Press  or **Transfer** during an active call. The call is placed on hold.
2. Enter the number you want to transfer to and press **Send**.
3. Press  or **Transfer** when the second party answers.

Powered by



Call Forward

To enable call forward:

1. Press the **Menu** when the phone is idle, and then select **Features > Call Forward**.
 2. Select the desired forward type.
 - **Always Forward** — Incoming calls are forwarded unconditionally.
 - **Busy Forward** — Incoming calls are forwarded when the phone is busy.
 - **No Answer Forward** — Incoming calls are forwarded if it is not answered after a while.
 3. Enter the number you want to forward to. For **No Answer Forward**, select the desired ring time to wait before forwarding from the **After Ring Time** field.
 4. Press **Save** to accept the change.
-

Powered by



Using Your Office Phone Guide (T57W)



Section 3: Conference Call

Powered by



Using Your Office Phone Guide (T57W)

Call Conference

1. Press the **Conference** during an active call. The call is placed on hold.
2. Enter the number of the second party, and then tap **Conference**.
3. Press the **Conference** again when the second party answers. All parties are now joined in the conference.
4. Press **EndCall** to disconnect all parties.

You can split the conference call into two individual calls by pressing **Split**.

Speed Dial

To configure a speed dial key:

1. Press the **Menu** when the phone is idle, and then select **Features > Dsskey**.
2. Select the desired **DSS** key and press **Enter**.
3. Select the **SpeedDial** from the **Type** field, select the desired line from the **Account ID** field, enter a label in the **Label** field, enter the number in the **Value** field.
4. Press **Save** to accept the change.

To use the speed dial key: Press the **SpeedDial** to dial out the preset number.

Powered by



Using Your Office Phone Guide (T57W)



Section 4: Setting Up and Managing Your Voice Mail

Powered by



Using Your Office Phone Guide (T57W)

Setting Up Your Voicemail

Creating Your PIN

1. Dial **5001** or press the **Messages/Voicemail** button on your phone.
2. Enter the default **PIN** provided by your organization followed by the **#key**.
3. Press **1** to change your **PIN**.
4. Enter your new 4 - to - 8 - digit **PIN**.
5. Re-enter PIN to confirm.
6. Confirmation - You should hear a message confirming that the PIN has been successfully changed.

Recording Your Name Announcement

1. Dial **5001** or press the **Messages/Voicemail** button on your phone.
2. Enter your voicemail **PIN** followed by the **#key**.
3. On the main menu, press **5** for "**Set Your Current Options**".
4. Press **2** to **record your name**.
5. At the prompt, **record your name** and then press the **#key**.

Powered by



Using Your Office Phone Guide (T57W)

Recording Your Voicemail Greeting

1. Dial **5001** or press the **Messages/Voicemail** button on your phone.
2. Enter your voicemail **PIN** when prompted.
3. On the main menu, press **6** to change the greeting
4. Press **1** to **Record Greeting**.
5. Enter the greeting number you wish to record (Default is 1) or listen to additional options.
6. Wait for the tone, then speak your greeting clearly.
7. Press the **#key** when you are finished.
8. You will be given the following options:
 - Press **1** to select a recorded message as your greeting. The greeting will be played back.
 - Press **0** to keep the previous greeting selection.

Updating Your Voicemail

Changing Your PIN

1. Dial **5001** or press the **Messages/Voicemail** button on your phone.
2. Enter current **PIN** followed by the **# key**.
3. On the main menu, press **5** - "**Set Your Current Options.**"
4. Press **1** to change your password.
5. Enter your new **4 - to - 8 - digit PIN**.
6. Re-enter **PIN** to confirm.

Powered by



Using Your Office Phone Guide (T57W)

Re-Recording Your Name Announcement

1. Dial **5001** or press the **Messages/Voicemail** button on your phone.
2. Enter your voicemail **PIN** followed by the **# key**.
3. On the main menu, press **5** - "**Set Your Current Options.**"
4. Press **2** to record your name.
5. At the prompt, record your name and then press the **# key**.

Changing Your Voicemail Greeting

- Dial **5001** or press the **Messages/Voicemail** button on your phone.
 - Enter your voicemail **PIN** when prompted.
 - On the main menu, press **6** to change the greeting.
 - From the **Greeting Menu**:
 - Press **1** to record greetings.
 - Record a new message.
 - Press **2** to review greetings.
 - Allows you to listen to all greetings that may be recorded on multiple numbers.
 - Press **3** to select greetings.
 - Select a greeting of your wish to set as your default greeting if you have multiple greetings recorded.
-

Powered by



Using Your Office Phone Guide (T57W)

Access Voice Message

The message waiting indicator on the idle screen indicates that one or more voice messages are waiting at the message center. The power indicator **LED** slowly flashes red.

To listen to voice messages:

1. Press  or **Connect**.
 2. Follow the voice prompts to listen to your voice messages.
-

Powered by



Using Your Office Phone Guide (T57W)



Section 5: Managing Call History and Contacts

Powered by



Using Your Office Phone Guide (T57W)

Call History

1. Press **History**.
 2. Select an entry from the list.
 3. Tap  after the desired entry, and then you can do the following:
 - Tap **Send** to call the entry.
 - Tap **Delete** to delete the entry from the list.
 - Tap **Delete** to delete the entry from the list.
 - Tap **Edit** to edit the entry before calling. Select
 - Tap **Add** to add the entry to the local directory.
 - Tap **Blacklist** to add the entry to the blacklist.
 - Select **Delete All** to delete all entries from the list.
-

Powered by



Using Your Office Phone Guide (T57W)

Contact Directory

To add a contact:

1. Tap **Directory**.
2. Tap **Add** to add a contact.
3. Enter a unique contact name in **Name** field and contact numbers in the corresponding fields.
4. Tap **Save** to accept the change.

To edit a contact:

1. Tap **Directory**.
2. Tap  to select the desired contact.
3. Edit the contact information.
4. Press **Save** to accept the change.

To delete a contact:

1. Tap **Directory**.
 2. Tap  to select the desired contact, then tap **Delete**.
 3. Press the **OK** when the LCD screen prompts "Delete selected item?".
-

Powered by

